



## Safety instructions and important information!

To ensure safety at all times and to use the full range of functions of the device, please read the safety instructions carefully and calmly!

The product must not be modified technically or mechanically; otherwise the operating permit and conformity will expire immediately. The type plate or the print must not be removed under any circumstances. Check the product for damage before each use. If it is damaged, it must be checked, repaired or replaced by a specialist company and disposed of in accordance with the applicable guidelines. A damaged or defective product must not be used under any circumstances. Please ensure that all packaging material and accessories, especially small parts such as screws and foil, are kept away from children and animals to avoid the risk of suffocation. The manufacturer accepts no liability for damage to property or personal injury resulting from failure to follow the instructions, improper use, misuse or modifications to the product. This product should never be accessible to children or animals and should not be kept, stored or stored there. Keep these instructions in a safe place and pass them on with the packaging if the product is passed on. We reserve the right to make changes or printing errors in the packaging, the product or the instructions.

### Separate safety instructions for rechargeable battery operation:

Always ensure the correct polarity when inserting the batteries. Only store the product and the batteries and rechargeable batteries in dry rooms at temperatures between 15 and 25 °C. Batteries and rechargeable batteries are not toys and must not be kept or used within the reach of children. Check the condition of the batteries regularly; damaged or leaking batteries can cause serious injuries. Always wear protective goggles and gloves.

Be sure to remove the batteries if you are not going to use the device for a long period of time (longer than a month). The standby time for the candles is up to 100 days, while the remote control remains ready for use for over a year. The lighting time with one set of batteries is around 130 hours.



Electronic products marked with the crossed-out waste bin do not belong in the household waste! You can hand these products in free of charge at the municipal collection points. Ask your local authority, the responsible town hall or a local or municipal waste disposal company for more information. Thank you! Used batteries must also not be disposed of in the household waste. Consumers are legally obliged to take batteries to a suitable collection point in the store or in the municipality. Used batteries can contain pollutants or heavy metals that can harm the environment and health.

The symbols under the marking (waste bin) mean:

Pb: Battery contains lead, Cd: Battery contains cadmium, Hg: Battery contains mercury.

**The environment and World Trading Net thank you!**